


Digital Photo Frame

Read This First

Welcome to the Sony DPF-X800/X1000, DPF-V800/V1000 Digital Photo Frame.

This leaflet explains preparations and basic viewing procedures. To enjoy a variety of viewing options or customize your photo frame, please read the operating instructions also supplied.

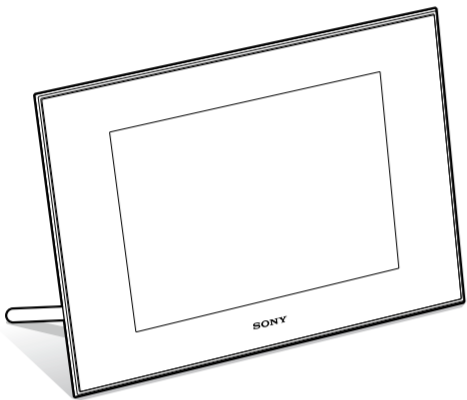

S-Frame

Checking the contents of the package

(The illustrations are of the DPF-X1000. The locations and names of buttons and connectors of the DPF-X800, DPF-V1000/V800 are identical to those of the DPF-X1000, although the LCD screen size and shape is different.)

Digital photo frame (1)

Stand (1)

Card slot cover (1)

Connector cover (1)

Remote control (1)

AC adaptor (1)

AC power cord (1)

Operating Instructions (1)


Read This First (this manual) (1)

Warranty (1)  
(In some regions, the warranty is not supplied.)

1 Preparing the remote control.


The supplied lithium battery (CR2025) has already been inserted into the remote control.

Pull out the protective sheet before use as shown in the figure.

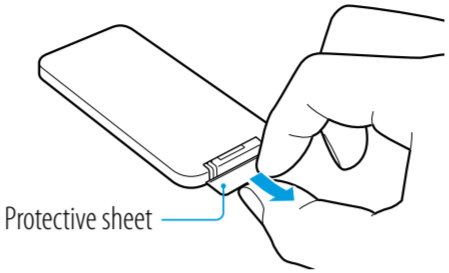


2 Preparing the photo frame.

Screw the stand supplied with the photo frame into the screw hole firmly until the stand stops turning (when you use the photo frame as a photo stand).

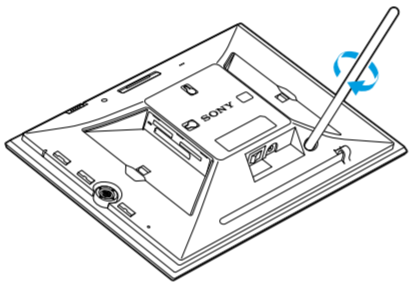

3 Connecting to the AC power source.


- 1 Insert the plug of the AC adaptor into the DC IN 8.4 V jack on the rear of the photo frame.
- 2 Connect the AC power cord to the AC adaptor and the wall outlet.

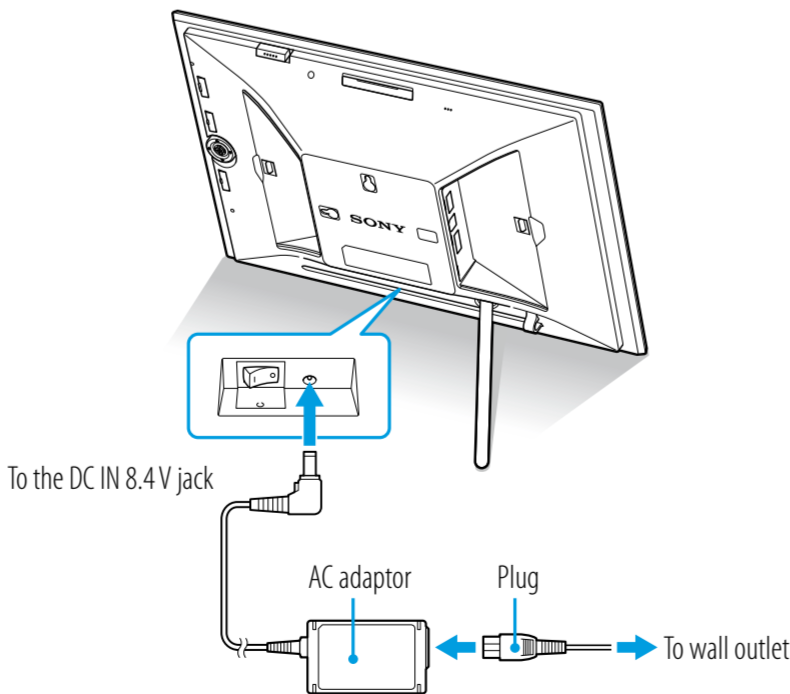

4 Turn the photo frame on.

- 1 Set to the POWER switch to ON.

The standby indicator turns green and the Sony logo on the front panel lights up.

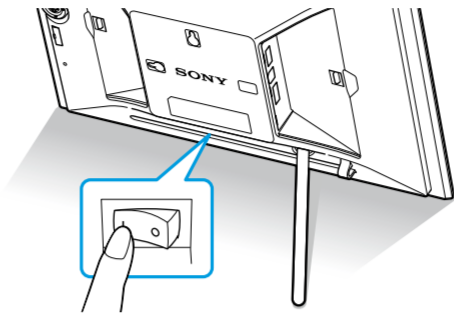


Tips

- Keep the POWER set to ON, when you use the alarm function or the auto power on/off function.
- The value of the following settings are returned to their factory settings if you turn the photo frame to OFF, and leave it off for a long time.
  - the setting value of [Date/time settings]
  - the setting time of the alarm function and the auto power on/off function

5 Set the current time.

- 1 Press MENU.

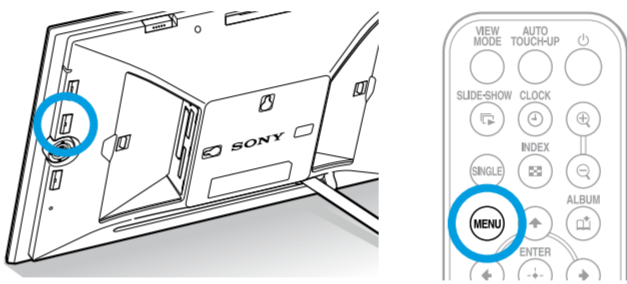

- 2 Press  $\leftarrow/\rightarrow$  to select the (Settings) tab.
- 3 Press  $\uparrow/\downarrow$  to select [Date/time settings] and then press  $\odot$ .


- 4 Set the current time following the guidance on the screen.



6 Insert a memory card into the slot.

- 1 Insert a memory card firmly into the corresponding slot.


The access lamp flashes when the memory card is inserted correctly. Reinsert the memory card after checking the label side of the memory card if the access lamp does not flash. The status of each memory card is as follows.

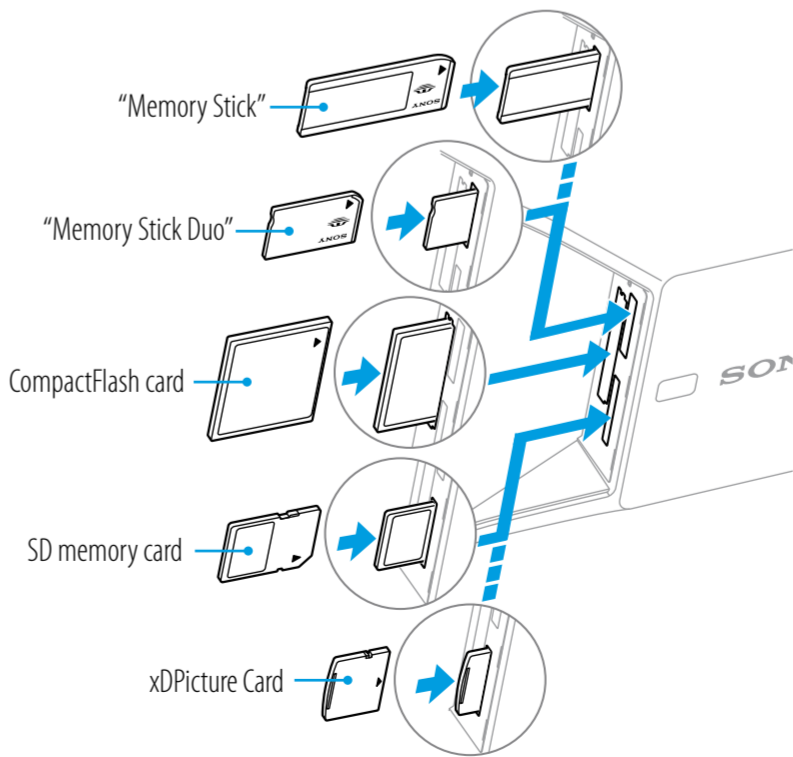

Note

All memory cards have a back-side and front-side, and an insertion direction. Refer to the following illustration and insert the memory card while you take note of its shape and the appropriate slot. It may cause malfunction if you insert the card in the wrong direction.

We recommend that attach the slot cover supplied with this photo frame when you insert the memory card and leave it inserted for a long time.

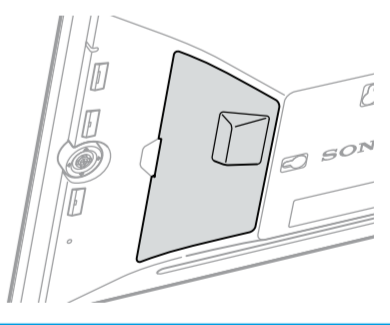


- 2 The slideshow of the memory card you inserted starts automatically.
- You can enjoy a variety of slideshow styles. ( $\rightleftarrows$ )



Let's use various functions


1 Press VIEW MODE.

The view mode screen is displayed.

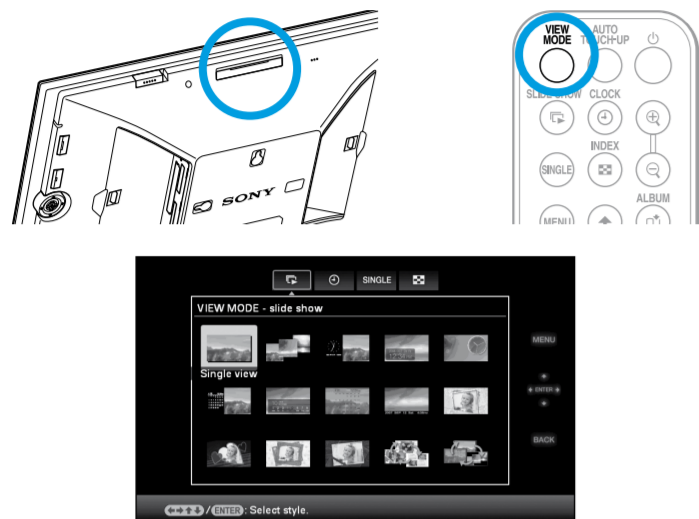


2 Select the group you want.

Press (Clock and calendar), (Slideshow), (Index), or (Single) on the remote. Or press / / / to move the cursor to group area and then press / on the photo frame to select the group you want.

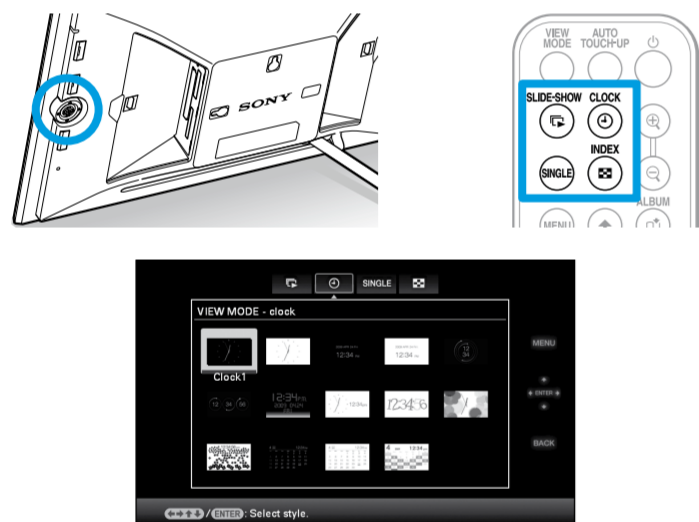

3 Select the style you want.

Press / / / to select the style you want, the press .

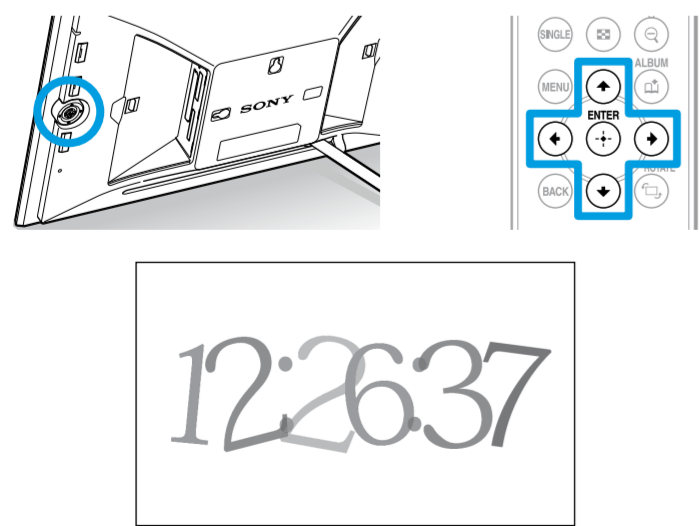


**Tip**  
The image illustration is the view mode screen of the slideshow. Clock and calendar, index, and single has each view mode screen.

The displaying screen

Refer to "Changing the display" on the operating instruction.

Clock and Calendar display

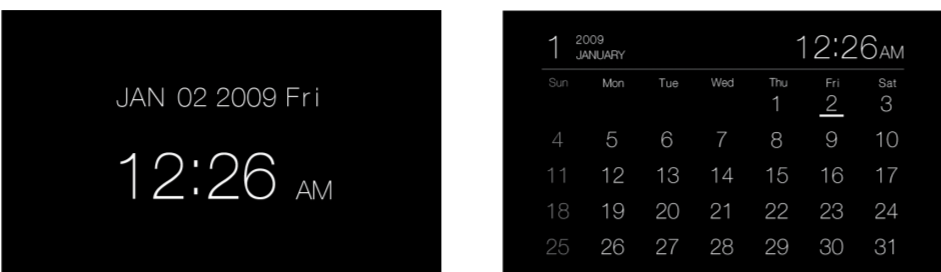

**Note**  
You cannot perform the setting operation of the menu when you display the clock and calendar display.

Slideshow



**Tips**

- You can set the playback order in [Listing Order] on [General Settings].
- Refer to the "Changing the settings" in the operating instructions.
- When you select [Time Machine] in a slideshow mode, the day when the image is shot or the day the file was updated is displayed.

Index image display



**Tip**  
The listing order of the images is same as the one you selected in [Listing Order] on [General Settings].

Single view mode



Various functions

**BGM playback**  
➔ Refer to "Connecting to a high definition TV to view images" in the operating instructions.

**Adding image to the internal memory**  
➔ Refer to "Adding image to the internal memory" in the operating instructions.

**Editing image (stamp, or frame,, etc)**  
➔ Refer to "Using the CreativeEdit function" in the operating instructions.

**Image Quality**  
➔ Refer to "Changing the settings" in the operating instructions.

**Auto Touch-up**  
➔ Refer to "Auto Touch-up" in the operating instructions.

**Setting the alarm**  
➔ Refer to "Using the alarm function" in the operating instructions.


**Auto power on/off**  
➔ Refer to "Changing the settings of the auto power on/off function" in the operating instructions.

Enjoying the photo frame with other device

Connecting to a high definition TV to view images


➔ Refer to "Connecting to a high definition TV to view images" in the operating instructions.

**Tip**  
A TV compatible with HDMI control is required.

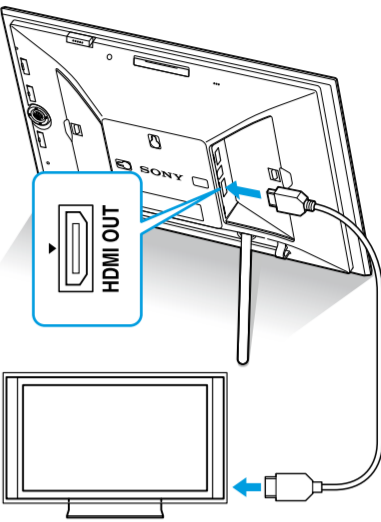


Transmitting the image from external device

➔ Refer to "Operating an external device connected to the photo frame" in the operating instructions.

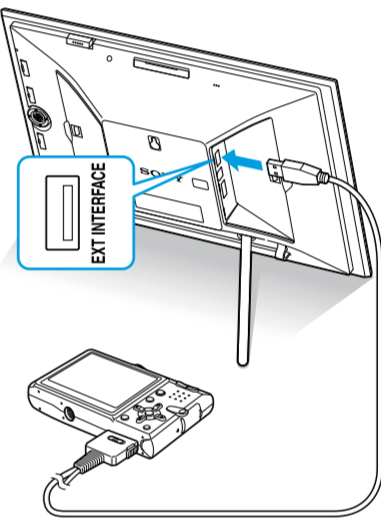

Using the photo frame with a Bluetooth device

➔ Refer to "Connecting to a Bluetooth device" in the operating instructions.

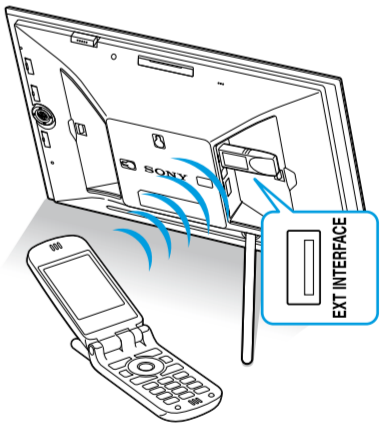

Connecting to a computer

➔ Refer to "Connecting to a computer" in the operating instructions.

